

Deluxe Exhibitor Display

254140, 254141, 254142,
254143, 254144, 254145

Product Parts

- 1 - Foot (x2)
- 2 - Winged Bolt* (x4)
- 3 - Right Horizontal Pole w/screw (x2)
- 4 - Left Horizontal Pole (x2)
- 5 - Vertical Telescoping Pole - with screws (6) secured (x2)
- 6 - Screw (x2)
- 7 - Phillips Screwdriver



**Do not overtighten the Winged Bolts or unit will fail*



Display Set-Up

 
Step 1

Remove the parts from the bag and place on a clean, flat surface, along with your banner face down. Extend the top and center sections of the first Vertical Telescoping Pole (5) so that it is a few inches longer than your banner. Lock your pole setting by twisting the pole to tighten. Place the pole next to the vertical edge of your banner.




Step 2

Repeat these steps for the second Vertical Telescoping Pole (5). Place pole next to the other vertical banner edge.

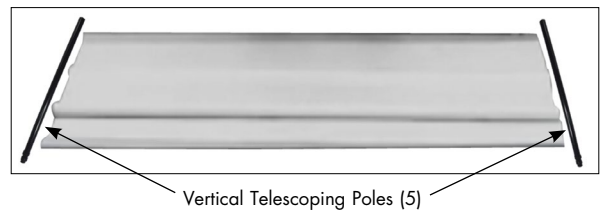

Step 3

 Join the threaded section of the Right Horizontal Pole (3) with the threaded hole of the Left Horizontal Pole (4). When both poles are assembled, place the Horizontal Poles (3 and 4) on the upper and lower outer edges of your banner.

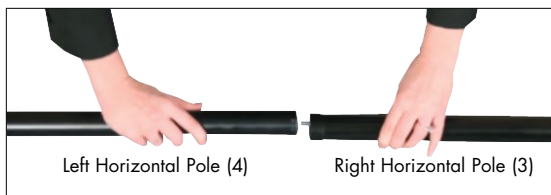

Step 4

Extend the lower Horizontal Poles (3 and 4) so that they are the desired width to display your graphic. Lock your pole settings in place by twisting the poles. Once set, fully insert the lower Horizontal Pole (3 and 4) into the lower pole pocket of your banner.



Repeat this process for the upper Horizontal Pole (3 and 4).

Step 5

Align the contoured curve of the upper Horizontal Pole (3 and 4) to the hole at the end of Vertical Telescoping Pole (5). Insert a Winged Bolt (2) through the hole in the Vertical Telescoping Pole (5) and screw into the threaded hole in the Horizontal Pole (3 and 4). Turn the Winged Bolt (2) clockwise until tight.



***DO NOT over tighten Winged Bolts or UNIT WILL FAIL**

Step 6

 
Repeat Step 5 for the three remaining corners. Creating a "frame" around your banner.



Display Set-Up Continued...

Step 7

Once all poles are fastened, remove the screw from the bottom of a Vertical Telescoping Pole (5). Insert the pole into the hole located on the Foot (1).

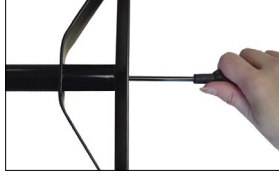

Insert the screw through the hole in the Foot (1) and fully secure with a phillips head screw driver.

Repeat these steps to attach the Foot (1) to the other side of the display.

Step 8

Rotate the Feet (1) so that they are perpendicular to the Horizontal Poles and lift the display to an upright position.



If your banner seems loose or sagging, simply lift the upper Horizontal Telescoping Pole (3 and 4) and turn the sections of the Vertical Telescoping Poles (5) counterclockwise and lock in place when banner is taut.



Storage

Place all product parts into Carry Case and store in a cool dry location.



Care

Hardware Care: Clean, wipe with damp cloth.

Fabric Graphic Care: Machine Wash Cold Gentle. Cycle Air Dry Only. Do NOT Dry Clean. Do NOT Iron.



Warranty Information: All products are designed to provide the user with a cost-effective and durable product. Standard warranty is a 'one year parts and labor' warranty which warrants product against defects in material and workmanship. It does not cover damage due to accidents, abuse, or normal wear and tear. Products found to be defective will be replaced or repaired at factory's discretion.