
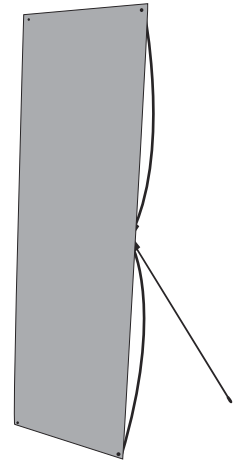


Tri-X Banner Display

263100, 263101, 263102, 263103, 263104, 263105,
263106, 263107, 263108, 263109, 263110, 263111,
263112, 263113, 263114

Product Parts


- 1 - Hooked Poles (x4)
- 2 - Base Pole (x1)
- 3 - X Hub (x1)

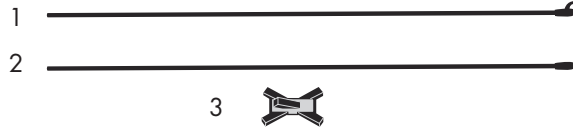

Display Set-Up


Step 1

Remove all parts from the bag and place on a clean flat surface. Insert the Base Pole (2) into the X Hub (3) back receptacle.

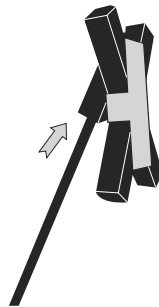


Step 2

Insert 2 of the Hooked Poles (1) into the lower receptacles of the X Hub (3) **creating a tripod**. Then, insert two Hooked Poles (1) into the X Hub (3) top receptacles.

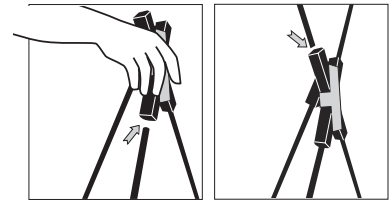


Step 3

Attach banner by inserting the hooks located on the Top Hooked Poles (1) into the top grommets of the banner. Gently pull the banner down to hook the lower banner grommets to the lower Hooked Poles (1).

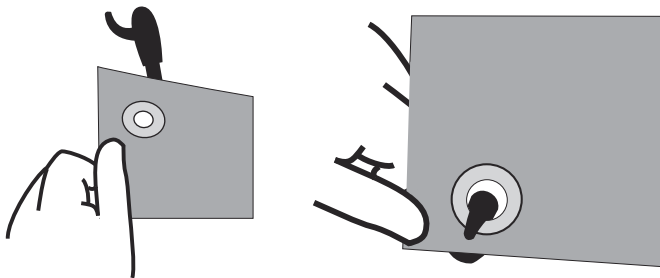

Note:

The Euro X Banner Display is designed to bend. When properly installed, the Banner will pull taut and the Hooked Poles (1) will arch. However, if a banner smaller than the recommended size is installed, it may cause permanent failure of the display. See graphic templates on-line for recommended sizes.

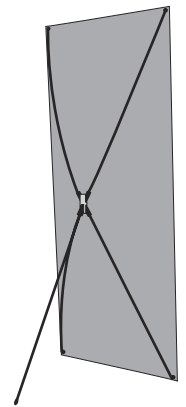

Storage

Place all product parts into Drawstring Pouch and store in a cool dry location.



Care

To clean, wipe with damp cloth.

Warranty Information: All products are designed to provide the user with a cost-effective and durable product. Standard warranty is a 'one year parts and labor' warranty which warrants product against defects in material and workmanship. It does not cover damage due to accidents, abuse, or normal wear and tear. Products found to be defective will be replaced or repaired at factory's discretion.