 


Deluxe Geo Connecting Kit

Item #	FRAMES	FACE PLATES	CONNECTING PLATES	STRAIGHT SHELF	CONNECTING SHELF	REPLACEMENT GRAPHIC KIT	FABRIC GRAPHICS
342022	3 Qd x2	0	32	4	2	342024	(2) H (2) M
342025	3 & 9 Qd	16	32	8	2	342027	(1) J (2) M , 9 Qd Backwall
342028	6 Qd x2	16	32	4	2	342030	(2) F (2) G (2) M (2) E
342031	3 (x2) & 6 Qd	8	48	8	4	342033	(2) B (2) A (2) H (2) M (2) B
342034	3 Qd x4	0	64	8	4	342036	(12) A (24) K
342037	6 Qd x2	28	24	2	8	342039	(2) H (2) K (2) C (2) E
342040	3 Qd x3	0	48	4	4	342042	(2) H (2) J (6) M

Product Parts for HARDWARE

- 1 - Geometrix Face Plates**
- 2 - Geometrix Connecting Face Plates**
- 3 - Soft Case
- 4 - Frame
- 5 - Clear Shelf
- 6 - Clear Connecting Shelf
- 7 - Fabric Graphic

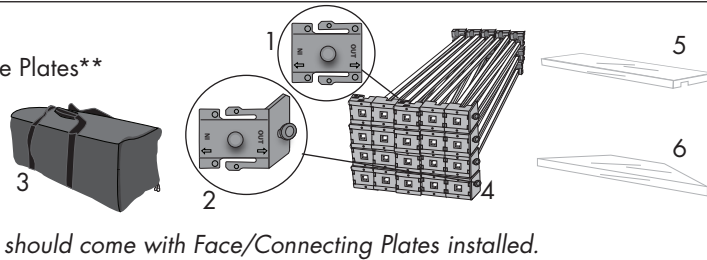

**Frames (4) should come with Face/Connecting Plates installed.

Product Parts for FABRIC GRAPHIC (skip to STEP 4)

7 - Fabric Graphics (qty varies) see page 3 & 4 for layout of graphics.



ALL PARTS COME IN THE KIT

TOP VIEWS



6 Quad Pyramid



 
 
3 Quad



6 Quad




9 Quad

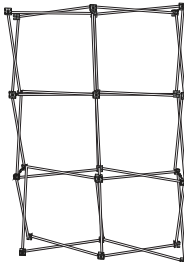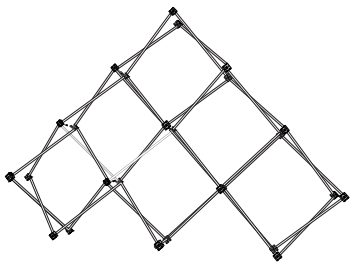

Display Set-Up


Step 1

 Remove all parts from your Soft Carry Case and boxes (3) and place on a flat, clean surface. Review the Frame (4) and notice where the pivoting light clips are located. This will determine the TOP of the display.

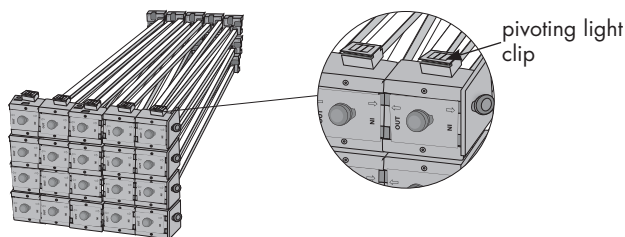

Step 2

 
Pull the Frame (4) up and out from the corners until it is fully expanded.

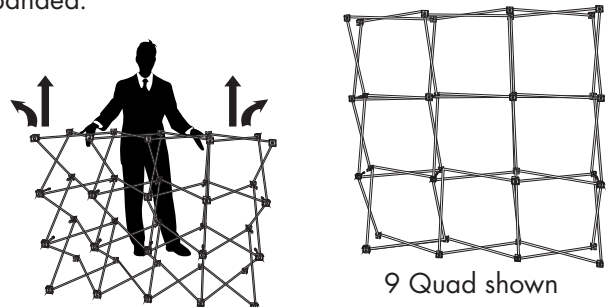


9 Quad shown

Step 3

 
Push all locking clips together to secure the Frame (4) in its expanded position.

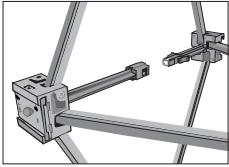

OPEN

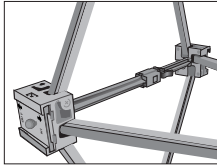 

CLOSED

 


Pressure may need to be applied to secure.

Step 5

Place the shelf (5) within the Frame (4) making sure all four notches on the shelf sides fit over the Frame (4) "scissors". Push gently down until level.

 Connecting Shelves (6) rest on the Connecting Face Plates (2) on outside of Frame


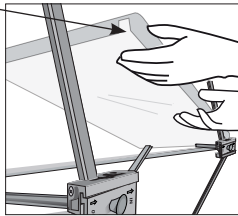


Frame Note:

** REMOVAL NOTE:

Graphic Face Plates (1) have arrows and the words "IN" and "OUT" stamped on them.

  To Determine which end is "OUT", look at the end of the Face Plate. The "OUT" side has 2 bump outs. The "IN" side does not.

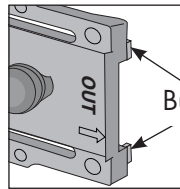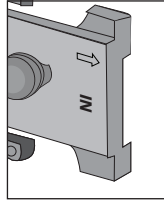


Bump outs

No "bump outs" indicates it is the "IN" side.


TO INSERT FACE PLATES:

 Slide (with force) the Face or corner Plates (1/2) into the hubs. Typically you will slide RIGHT to LEFT when looking at the face of the Frame.

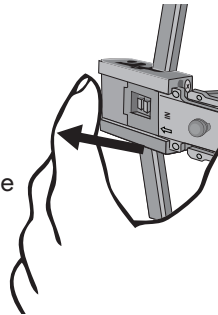

Step 4

 Attach Fabric Graphics (7) to frame by locating hole slits in each corner and securing them around the plastic pin on the face or corner plate. Repeat this step for each banner until all are secured to frame in pre-set locations (see pages 3 and 4).

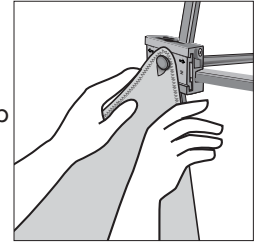


Frame Note:

TO REMOVE/REPLACE FACE PLATES:

If you need to replace or remove existing face or corner plates, find the end of the Plate that is marked "OUT". **see NOTE if you cannot indicate which end is "OUT". Push Face Plate toward the "OUT" arrow.

 You may need to tap end with force to get it to start sliding.

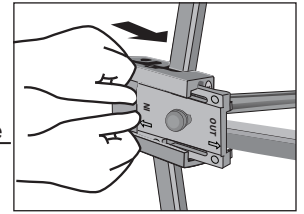


Disassembly Note:

For quick take down and future set up, you may leave graphic banners on Frame (4).


Unlock and **OPEN** all locking clips as shown in Step 3.

REMOVE ANY SHELVES Collapse Frame (4) with all Fabric Graphics (7) attached by pushing down and in on unit.

 MAKE SURE ALL LOCKING CLIPS ARE IN OPEN POSITION before collapsing Frame (4)

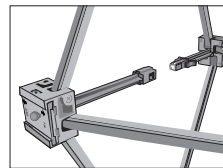

OPEN

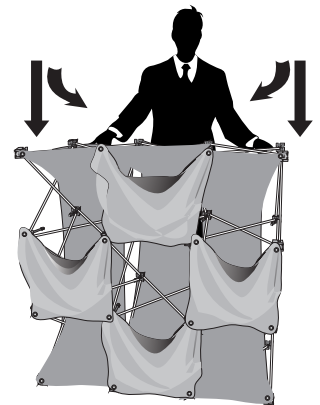 

Storage

Place Frame into Carry Case and store in a cool dry location.



Care

Machine wash Cold gentle cycle. Machine Dry, NO HEAT, Do not Dry Clean, Do not iron.

NOTE: FRAME HARDWARE HAS HUBS THAT CAN BE INTERCHANGED TO DISPLAY OTHER PRODUCTS

Conversion kits sold separately-contact client services for more details

FRONT FRONT FRONT FRONT

Banner A attaches to the front of the frame on all four corners

OPTION: attach to all back corners

FRONT FRONT FRONT FRONT

Attaches to the front of the frame with the top two corners and the back of the frame on the bottom two corners.

OPTION: this can be reversed with the bottom two corners in the front and the top two corners in the back.

BACK FRONT BACK FRONT

Attaches to the front of the frame with the right two corners and the back of the frame with the left two corners.

OPTION: this can be reversed with the left two corners in the front and the right two corners in the back

FRONT FRONT FRONT FRONT

Attaches vertically to the front of the frame with all six peg holes.

OPTION: Attach to back pegs

Attaches horizontally to the front of the frame with all six peg holes.

FRONT FRONT FRONT FRONT FRONT FRONT

OPTION: Attach to all back pegs.

FRONT FRONT FRONT FRONT FRONT FRONT

Covers 4 quads and attaches to the front of the frame with all nine peg holes.

OPTION: with all nine peg holes in the back.

FRONT FRONT FRONT FRONT

Attaches diagonally to the front of the frame with all four peg holes.

OPTION: Attach to all back pegs.

The two sets of end peg holes attach to the front of the frame, the center (top and bottom) four peg holes attach to the back of the frame.

FRONT FRONT FRONT FRONT FRONT FRONT

 
OPTION: this can be reversed with the two sets of end peg holes attach to the back of the frame, the center (top and bottom) four peg holes attach to the front of the frame.

BOTH OPTIONS CAN BE USED VERTICAL


FRONT FRONT FRONT FRONT

Attaches vertically only to the frame, with the top four peg holes on the front of the frame, and with the bottom two peg holes attached to the back of the frame.


OTHER OPTIONS:

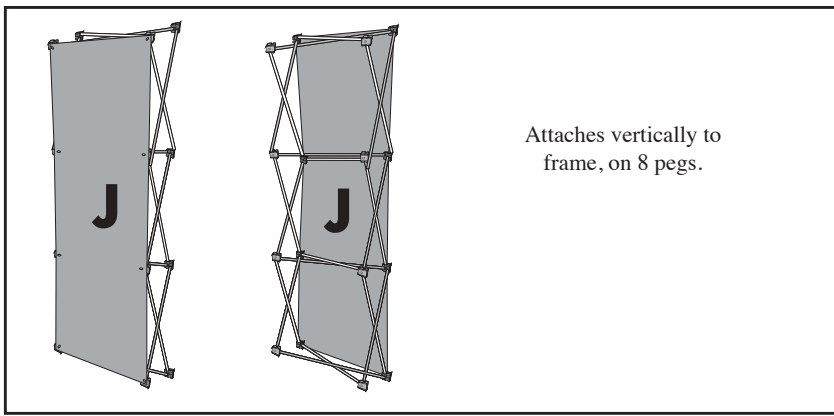

 
Attaches vertically to frame, on 8 pegs.

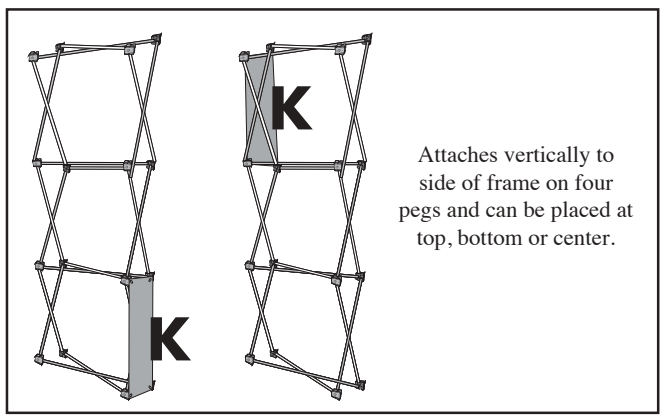

 Attaches vertically to side of frame on four pegs and can be placed at top, bottom or center.

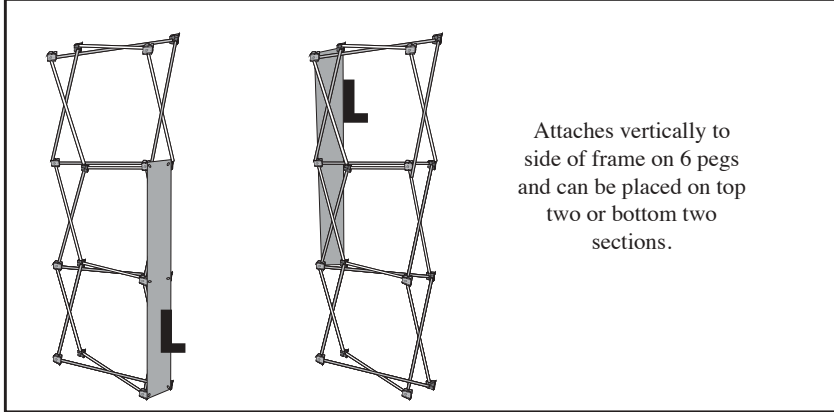

 Attaches vertically to side of frame on 6 pegs and can be placed on top two or bottom two sections.

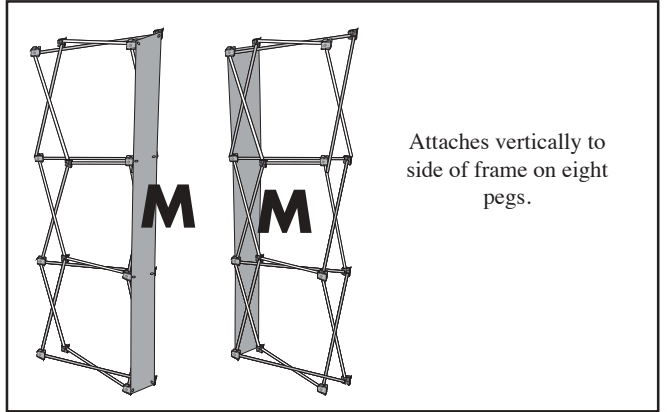

Attaches vertically to side of frame on eight pegs.

Kit Configurations

