


Product Specifications Viewable Graphic Size: SEE PAGE 3

Item #	FRAME	**PLATES	SHELVES	Replacement Graphics-KIT	FABRIC GRAPHICS
342000	12 QUAD	40	2	342001	(4) C (1) E (1) G (2) H
342002	9 QUAD	32	3	342003	(4) A (3) H
342004	9 QUAD	32	3	342005	(2) A (2) H (2) I
342006	9 QUAD	32	2	342007	(1) E (1) F (1) G (1) H
342008	9 QUAD	32	3	342009	(1) D (2) H (1) I
342010	3 QUAD	16	1	342011	(2) A (1) H
342012	3 QUAD	16	NONE	342013	(3) A
342014	6 QUAD	26	NONE	342015	(2) A (1) F (1) G

Product Parts for HARDWARE

 
- 1 - Geometrix Face Plates**
- 2 - Soft Case
- 3 - Frame
- 4 - Shelf

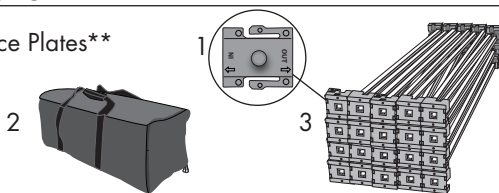

**Frame (3) should come with Face Plates already installed.


Product Parts for FABRIC GRAPHIC (skip to STEP 4)

- 5 - Fabric Graphics (qty varies)
see page 3 for layout of graphics




ALL PARTS COME IN THE KIT

 1 QUAD



TOP VIEW

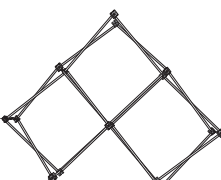

3 Quad
Pyramid
338022




TOP VIEW



6 Quad
Pyramid
338023




TOP VIEW

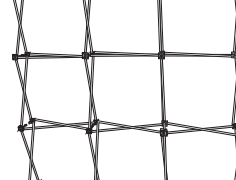

9 Quad
338024



TOP VIEW

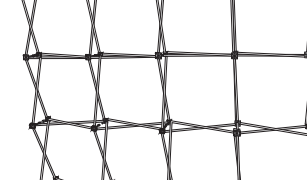


12 Quad
338025

Display Set-Up


Step 1

Remove all parts from your Soft Carry Case (2) and place on a flat, clean surface. Review the Frame (3) and notice where the pivoting light clips are located. This will determine the TOP of the display.

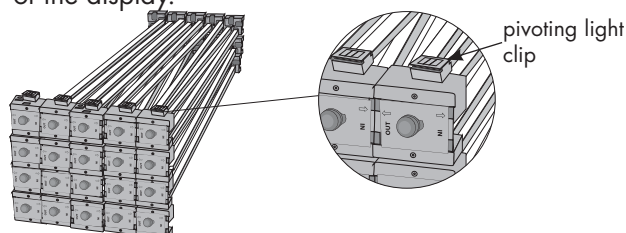

Step 2


Pull the Frame (3) up and out from the corners until it is fully expanded.

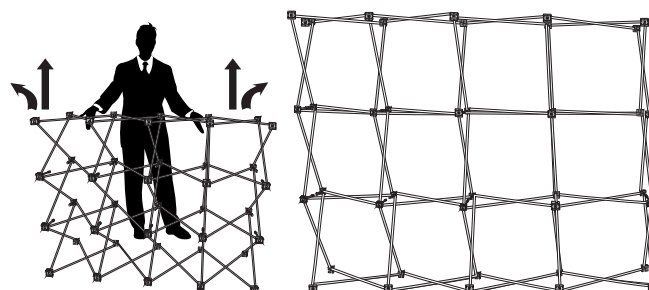


12 Quad (10' FRAME) shown

Step 3


Push all locking clips together to secure the Frame (3) in its expanded position.

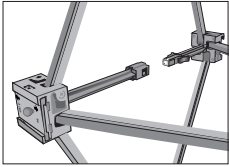

OPEN

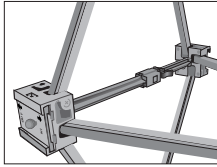

CLOSED

 


Pressure may need to be applied to secure.

Step 5

All shelves have an "X" shape on the underside that fits over the "X" shape on the Frame (3) "scissors".

Place the shelf notch (4) in its desired position making sure all four notches on the shelf sides fit over the Frame (3) "scissors".

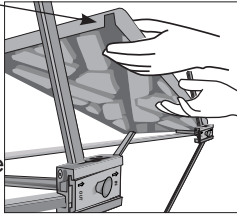



(Not all Kits come with shelves)

Frame Note:

** REMOVAL NOTE:

Graphic Face Plates (1) have arrows and the words "IN" and "OUT" stamped on them.

To Determine which end is "OUT", look at the end of the Face Plate. The "OUT" side has 2 bump outs. The "IN" side does not.

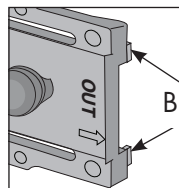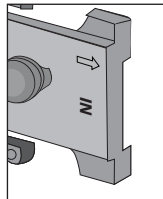


Bump outs

No "bump outs" indicates it is the "IN" side.

TO INSERT FACE PLATES:


Slide (with force) the Face Plates (1) into the hubs. Typically you will slide RIGHT to LEFT when looking at the face of the Frame.

Face Plates need to be installed on ALL front and back hubs for Deluxe Geometrix.

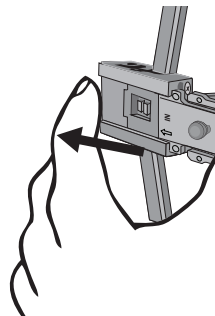

Step 4

Attach Fabric Graphics (5) to frame by locating hole slits in each corner and securing them around the plastic pin on the face plate. Repeat this step for each banner until all are secured to frame in pre-set locations (see pages 3 and 4)

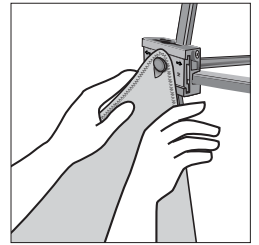


NOTE: STANDARD KITS SHOULD COME WITH FABRIC GRAPHICS ALREADY ATTACHED.

(Maximum Banners per peg is 6)

Frame Note:

TO REMOVE/REPLACE FACE PLATES:

If you need to replace or remove existing face plates, find the end of the Plate that is marked "OUT". **see NOTE if you cannot indicate which end is "OUT". Push Face Plate toward the "OUT" arrow.

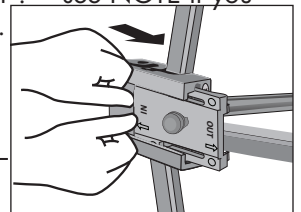

You may need to tap end with force to get it to start sliding.


Disassembly Note:

For quick take down and future set up, you may leave graphic banners on Frame (3).


Unlock and **OPEN** all locking clips as shown in Step 3.

REMOVE ANY SHELVES Collapse Frame (3) with all Fabric Graphics (5) attached by pushing down and in on unit.

MAKE SURE ALL LOCKING CLIPS ARE IN OPEN POSITION before collapsing Frame (3)

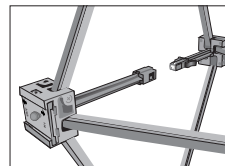

OPEN

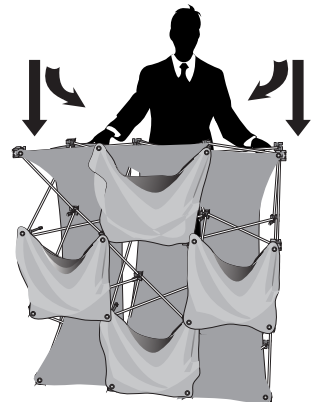

Storage

Place all product parts into Carry Case and store in a cool dry location.



Care


Machine wash Cold gentle cycle. Machine Dry, NO HEAT, Do not Dry Clean, Do not iron.

NOTE: FRAME HARDWARE HAS HUBS THAT CAN BE INTERCHANGED TO DISPLAY OTHER PRODUCTS

Conversion kits sold separately-contact client services for more details


Item# 342000, 342001

BANNER C:
29.5"W x 28.5"H
QTY: 4
BANNER E:
56"W x 28.5"H
QTY: 1
BANNER G:
37" x 39.5"
QTY: 1
BANNER H:
26.75"W x 90.875"H
QTY: 2

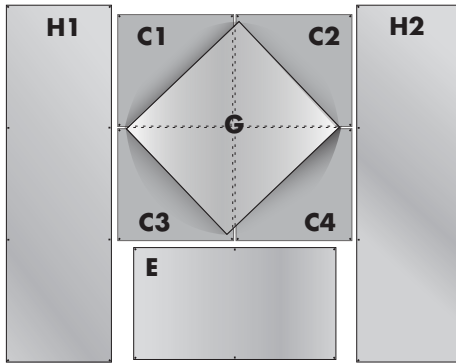


Item# 342002, 342003, 338084

BANNER A: 26.75"W x 28.5"H
QTY: 4
BANNER H: 26.75"W x 90.875"H
QTY: 3

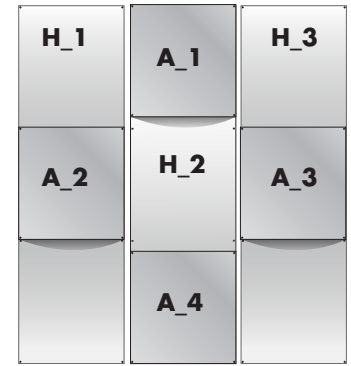


Item# 342004, 342005

BANNER A: 26.75"W x 28.5"H
QTY: 2
BANNER H: 26.75"W x 90.875"H
QTY: 2
BANNER I: 26.75"W x 59.688"H
QTY: 2

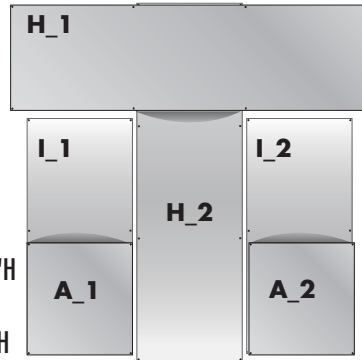


Item# 342006, 342007

BANNER E: 51.5"W x 28.5"H
QTY: 1
BANNER F: 52.5"W x 56"H
QTY: 1
BANNER G: 39"W x 37.5"H
QTY: 1
BANNER H: 26.75"W x 90.875"H
QTY: 1

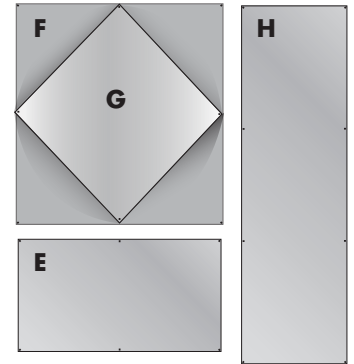

Item# 342008, 342009

BANNER D: 26.75"W x 56"H
QTY: 1
BANNER H: 26.75"W x 90.875"H
QTY: 2
BANNER I: 26.75"W x 59.688"H
QTY: 1

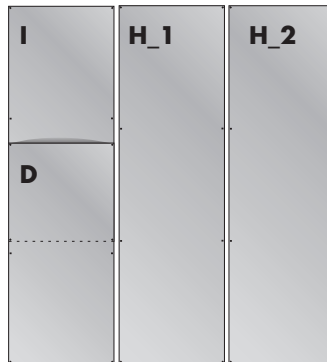


Item# 342010, 342011

BANNER A: 26.75"W x 28.5"H
QTY: 2
BANNER H: 26.75"W x 90.875"H
QTY: 1



Item# 342012, 342013


BANNER A: 26.75"W x 28.5"H
QTY: 3

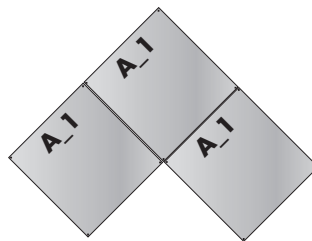

45° Counter-Clockwise Rotation

Item# 342014, 342015

BANNER A: 26.75"W x 28.5"H
QTY: 2
BANNER F: 52.5"W x 56"H
QTY: 1
BANNER G: 39"W x 37.5"H
QTY: 1

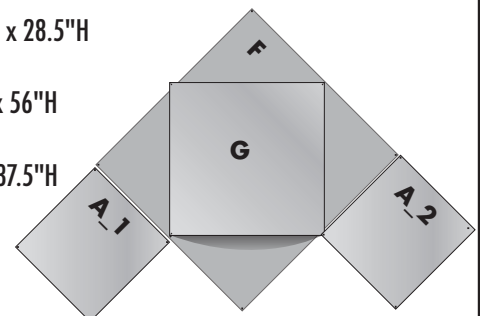

45° Clockwise Rotation for
F and both A panels

