


Flex Banner

Product Parts

- 1 - Graphic # , ‡ , +
- 2 - Horizontal Rail (x2#)(x4+)
- 3 - Top Pole with Cap
- 4 - Bottom Pole
- 5 - Base
- 6 - Base Support
- 7 - Literature Shelves (x3#)
- 8 - 2mm Hex Wrench
- 9 - 2.5mm Hex Wrench
- 10 - 5mm Hex Wrench
- 11 - Phillips Screwdriver
- 12 - Open Ended Wrench


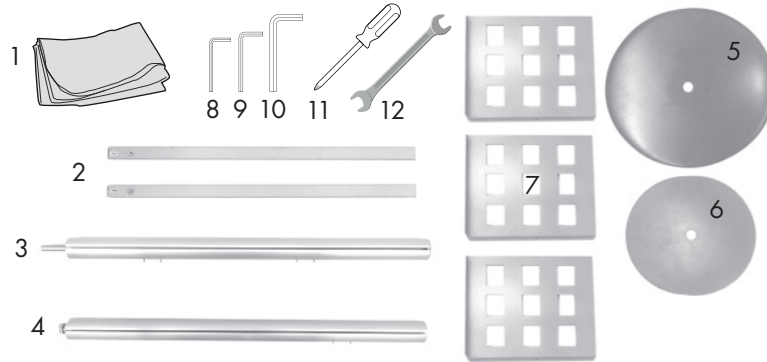


- # Single Banner with Literature Display
- ‡ Single Banner Display
- + Two Banner Display

Display Set-Up


Step 1

Unscrew bolt from Bottom Pole (4). Align holes of Base (5) and Base Support (6) to hole where you just removed bolt. Base (5) should rest against Bottom Pole (4) followed by the Base Support (6), reinsert bolt and tighten with supplied Open Ended Wrench (12).

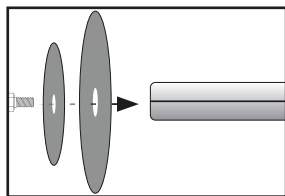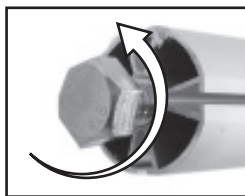


Step 2

Slide Top Pole with Cap (3) into top of Bottom Pole (4). Once properly seated secure set screws with supplied 2.5mm Hex Wrench (9)

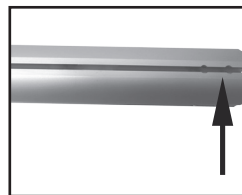


Step 3

Place mechanical end of one Horizontal Rail (2) into slot near top of Top Pole with Cap (3). Secure in place by using supplied 5mm Hex Wrench (10). Slide Graphic (1) over Horizontal Rail (2), leaving screw exposed, slide remaining Horizontal Rail through bottom pole pocket of Graphic (1) pulling downward for desired tension and secure Bottom Pole (4). Adjust as desired.

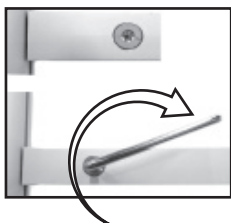

Step 4

Attach the 3 Literature Shelves (7) by removing then replacing screws into nuts preset into slot on Top Pole with Cap (3) and Bottom Pole (4). Adjust to desired location and hand tighten with supplied Phillips Screwdriver (11)

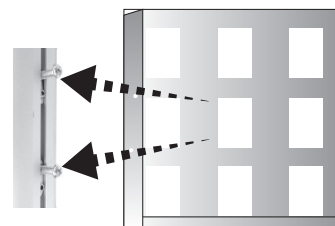

Storage and Care

Disassemble and store in a cool dry location.