


# FULL TENT WALLS

## (for Standard, Deluxe, Premium, Compact & Ultimate Frames)

### Product Parts

1 - Full Tent Wall

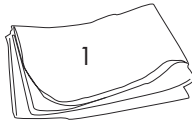


### NOTE:

All Full Tent Walls are designed with zippers on the vertical ends so they can be zipped together.

10ft Full Tent Walls fit any 10ft Standard, Deluxe, Premium, Compact or Ultimate Tent Frame. (Fits the 10ft side of 10x15 and 10x20 Premium Frames).

6ft Full Tent Walls fit the 6x6 Deluxe Tent Frame.  
 8ft Full Tent Walls fit the 8x8 Deluxe Tent Frame.  
 15ft Full Tent Walls fit the 10x15 Premium Frame.

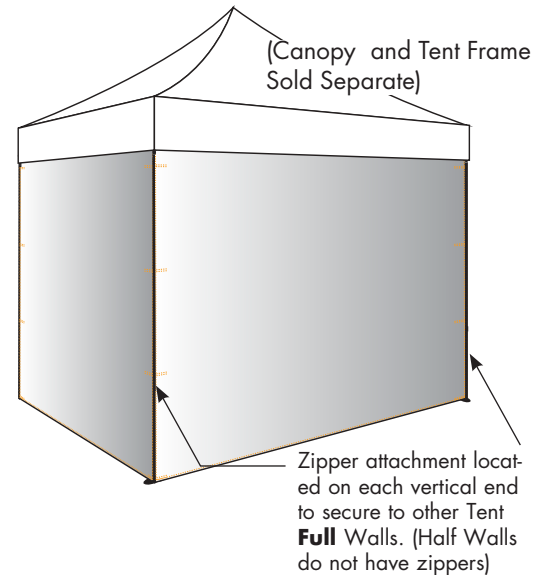


## Set-Up

### Step 1

Before you begin, have your existing Tent Frame legs in their lowest position.


### NOTE:

\*\* Full Tent Wall(s) are easiest installed with two people.

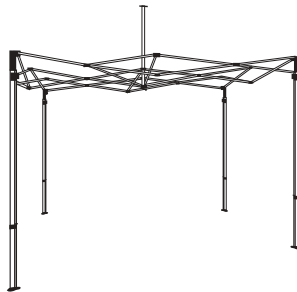


### Step 3

Secure loop Velcro™ on corner of Full Tent Wall to hook Velcro™ located on Tent Frame. Repeat for opposite corner.

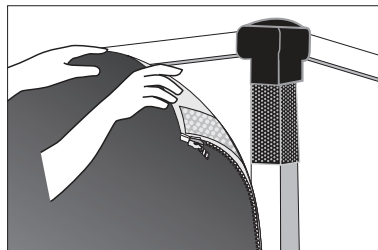

### NOTE:


(if canopy is in position, it will need to be pulled up at the corners to expose the hook Velcro™ on the Frame)

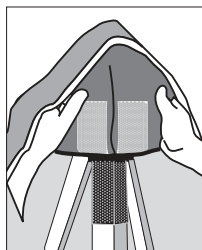

### Step 2


Verify the front of the Full Tent Wall.

**NOTE:** Full Tent Walls are imprinted with the front as viewed when standing outside the tent frame. The zipper pull will always be on the right hand side when viewing from outside the tent frame.

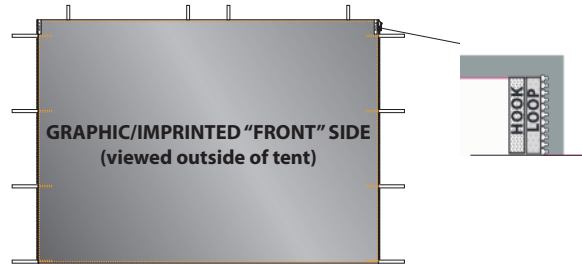

### Step 4


Loop all straps around the top of the tent Frame and secure to loop Velcro™ that is sewn to the Full Tent Wall. You may need to double wrap the strap before securing.

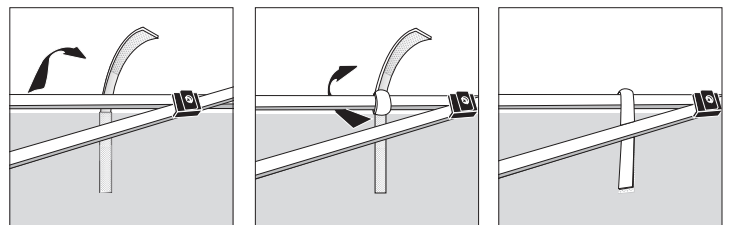

## Set-Up Continued...


### Step 5

For more than one Full Tent Wall: Attach together by zipping from top to bottom. Since the tent frame is not yet extended to its full height, zip only half way down to secure.

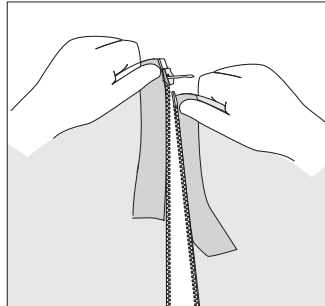


### Step 7

Loop all straps around each leg of the tent Frame and secure to loop Velcro™ that is sewn to the Full Tent Wall.

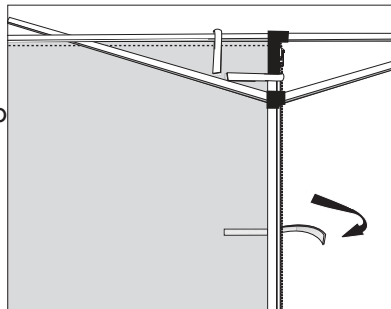


**NOTE:** straps fit best when velcro™ strips are aligned flush to one another.

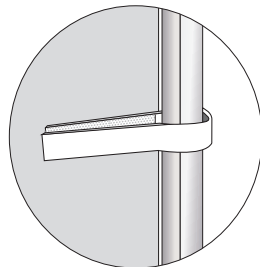


### Step 6

With Full Tent Wall secured at the top, you can now release and extend the telescoping legs to your desired height and lock the legs into place. Full Tent Wall height is made to have the frame in the 3rd push button position. So the bottom of the Full Tent Wall is almost to the floor.

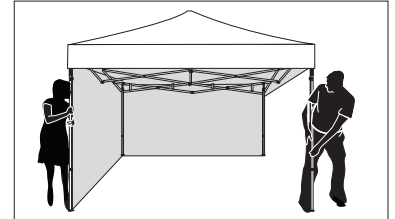

### Step 8


Secure valance of existing canopy over the Full Tent Wall. Loop Velcro™ on underside of valance will secure to Hook Velcro™ on Full Tent Wall corners.

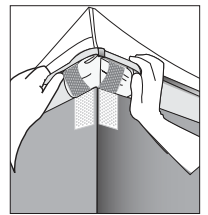

### Step 9

Finish zipping all Full Tent Walls.

Zip Full Tent Wall  
from top to bottom

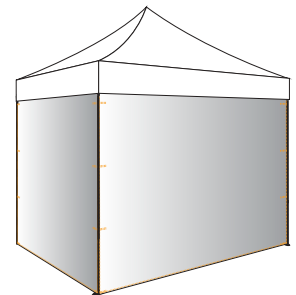

**NOTE:** Top 12" of Full Tent Wall will be covered by Canopy Valance

## Storage and Care

Remove Full Tent Wall(s) from Frame and Store in a cool dry location.

Care Instructions: Spot Clean w/Mild Soap & Water, Air Dry Only

Do NOT Dry Clean / Do NOT Iron

**FULL TENT WALLS ARE MADE TO VIEW IMPRINT WHILE  
STANDING OUTSIDE OF TENT FRAME.**

**YOU CAN FLIP THE WALL TO VIEW THE IMPRINT  
WHILE STANDING INSIDE OF TENT FRAME.**

*Note: if you flip one wall, you will have to flip all walls in order to zip  
together at corners.*