


Splash Fabric 4-Sided Display (STRAIGHT)


3FT Kit: 341042 3FT Graphic Only: 341045 5FT Kit: 341048
 5FT Graphic Only: 341051 8FT Kit: 341052 8FT Graphic Only:
 341054 10FT Kit: 341053 10FT Graphic Only: 341055

Item #	Graphic	Quads used	**PLATES
341042/341045	3FT 4-SIDED WRAP	3	8
341048/341051	5FT 4-SIDED WRAP	6	12
341052/341054	8FT 4-SIDED WRAP	9	16
341053/341055	10FT 4-SIDED WRAP	12	20

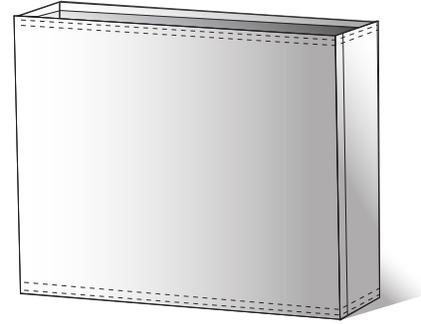

Product Parts for HARDWARE

- 1 - Splash Graphic Face Plates**
- 2 - Soft Case
- 3 - Frame

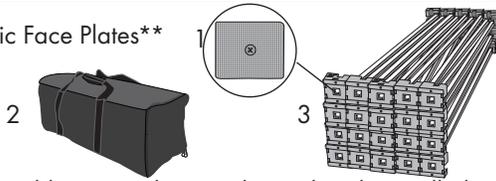

**Frame (3) should come with Face Plates already installed.



Product Parts for FABRIC GRAPHIC (skip to STEP 5)

- 4 - Fabric Graphic Banner



ALL PARTS COME IN THE KIT

1 QUAD

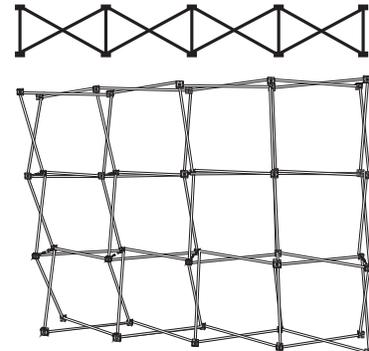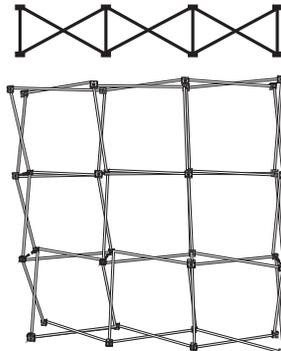

3 Quad (3' FRAME)

6 Quad (5' FRAME)


9 Quad (8' FRAME)

12 Quad (10' FRAME)


Display Set-Up

Step 1

Remove all parts from your Carry Case and place on a flat, clean surface. Review the Frames (3) and notice where the pivoting light clips are located. This will determine the TOP of the display.

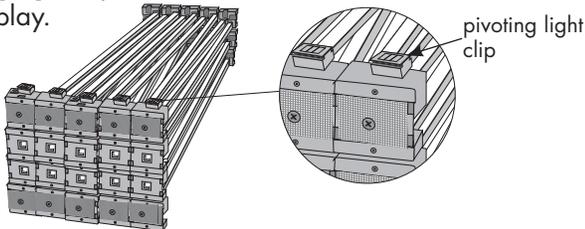


Also, verify face plate locations. You should have Splash Graphic Face plates (1) on all top and bottom hubs located on both sides of the frame.

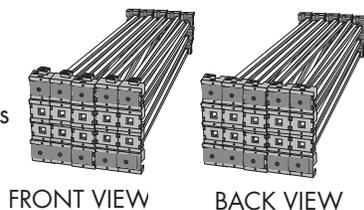

Step 2

If you need to replace or remove existing Face Plates, find the end of the Plate that is marked "OUT". **see NOTE if you cannot indicate which end is "OUT". Push Face Plate toward the "OUT" arrow.

You may need to tap end with force to get it to start sliding.


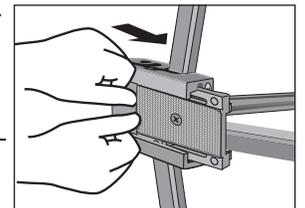


Display Set-Up Continued...

**REMOVAL NOTE:

Most Graphic Face Plates (1) have arrows and the words "IN" and "OUT" stamped on them (all except the Splash Graphic Face Plates)


To Determine which end is "OUT", look at the end of the Face Plate. The "OUT" side has 2 bump outs. The "IN" side does not.

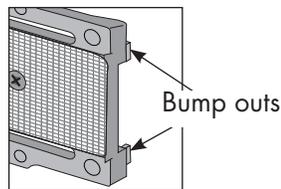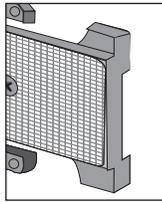


No "bump outs" indicates it is the "IN" side.

Step 4


Push all locking clips together to secure the Frame (3) in its expanded position.

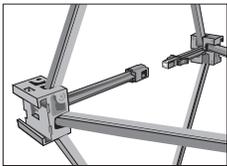

OPEN

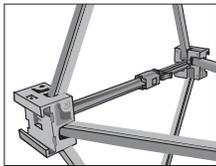


CLOSED

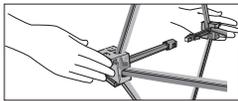

Pressure may need to be applied to secure.


Step 6

Secure the top and bottom Velcro along the top and bottom of one side of the Frame (3).

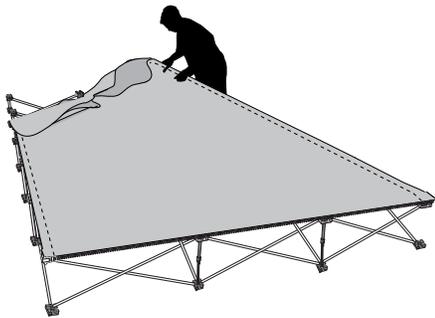


Step 8

With the entire Frame (3) wrapped and secured by velcro at top and bottom on both sides, secure zipper. Zip Fabric Graphic Banner only half way down.

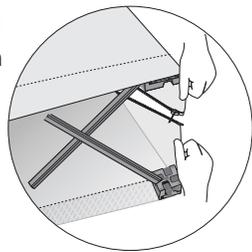

Step 3


Pull the Frame (3) up and out from the corners until it is fully expanded on the floor.

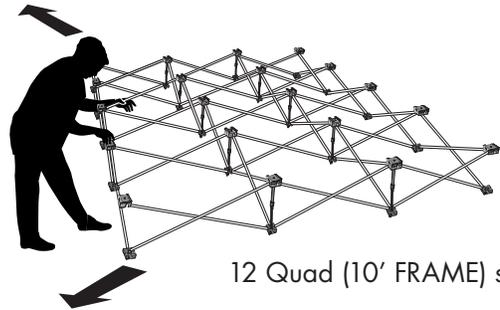

12 Quad (10' FRAME) shown


Step 5

Unzip Fabric Graphic Banner (4). With top of the Frame (3) identified, orient the Fabric Graphic Banner (4) so that its top aligns with the top of the Frame and the zipper side runs along the vertical end of the frame approx 1" from hub edge.

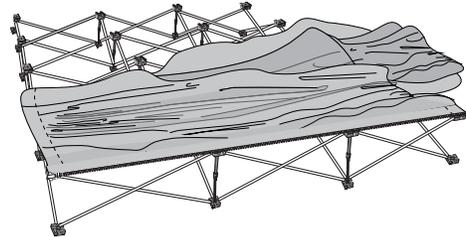


Step 7

Make sure the floor is clean or place a clean dry tarp in front of the Frame (3). Flip Frame (3) over and lay the attached Fabric Graphic Banner (4) face side down. Wrap around the side and repeat Step 6.

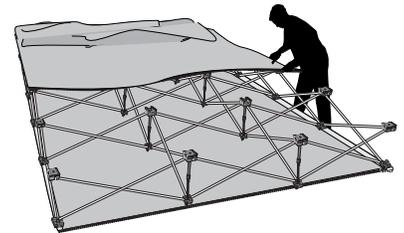


Step 9

Stand Frame Upright and finish zipping the zipper shut.

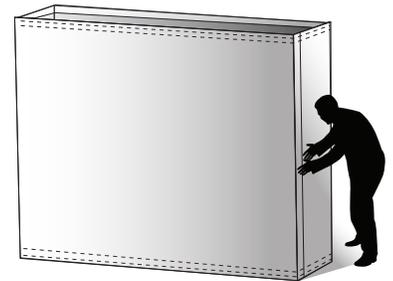

Disassembly note:

Repeat steps 9 thru 1 to disassemble. **MAKE SURE ALL LOCKING CLIPS ARE IN OPEN POSITION** before collapsing Frame (1)

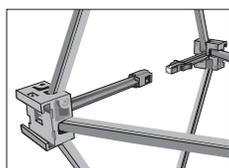

OPEN

Storage & Care

Place all product parts into Carry Cases and store in a cool dry location.

Machine wash Cold gentle cycle. Air dry Only. Wrinkles can be steamed out. Do NOT Dry Clean Do NOT Iron.



Not Recommended to collapse Frame (3) with Fabric Graphic (4) attached. Graphic will wrinkle.