



Product Parts for HARDWARE

- 1 - Splash Graphic Face Plates** (qty=44)
- 2 - Soft Case (qty=2)
- 3 - Frame (qty=2)

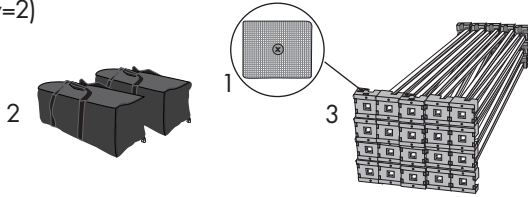


Product Parts for FABRIC GRAPHIC (skip to STEP 6)

 - 4 - Fabric Graphic Banner (qty=1)



ALL PARTS COME IN THE KIT

**Frame (3) should come with Face Plates already installed.

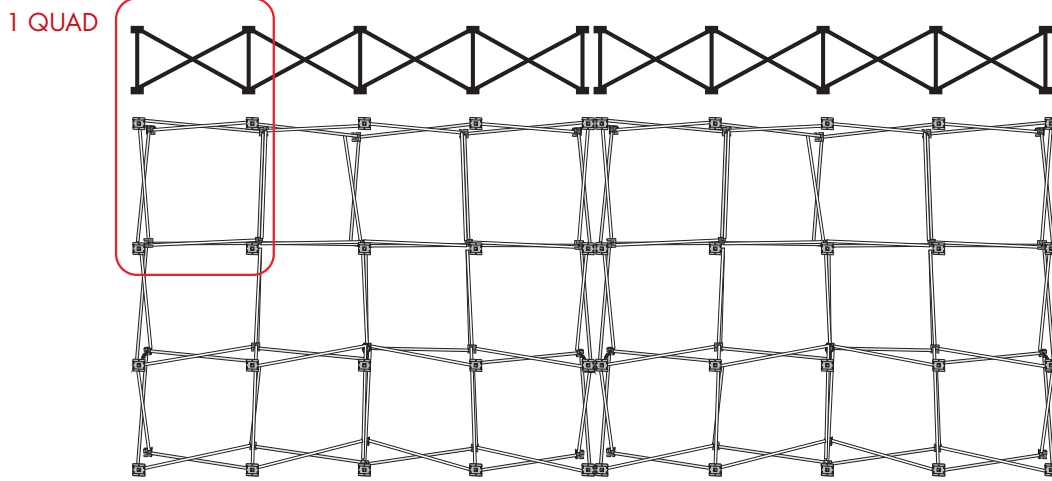

12 Quad (10' FRAME)


12 Quad (10' FRAME)

Frames (3) are set up side by side and connected with the Fabric Graphic Banner (4)

Display Set-Up


Step 1

Remove all parts from your Carry Case and place on a flat, clean surface. Review the Frames (3) and notice where the pivoting light clips are located. This will determine the TOP of the display.

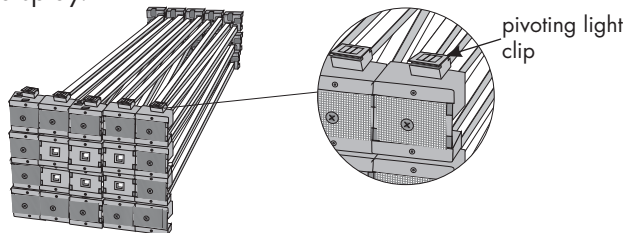

Step 2

Set both collapsed Frames (3) in an upright position. Remove the two center Splash Graphic Face Plates (1) from each Frame (3) end that face each other. See steps 3 and 4 for details on how to remove the Splash Graphic Face Plates (1)

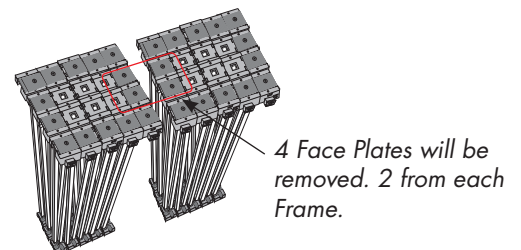


4 Face Plates will be removed. 2 from each Frame.

Display Set-Up Continued...

Step 3


If you need to replace or remove existing Face Plates, find the end of the Plate that is marked "OUT". **see NOTE if you cannot indicate which end is "OUT". Push Face Plate toward the "OUT" arrow.

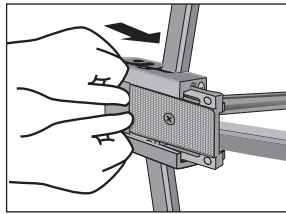


You may need to tap end with force to get it to start sliding.

**REMOVAL NOTE:

Most Graphic Face Plates (1) have arrows and the words "IN" and "OUT" stamped on them (all except the Splash Graphic Face Plates)

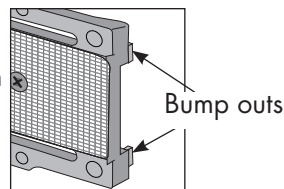


To Determine which end is "OUT", look at the end of the Face Plate. The "OUT" side has 2 bump outs. The "IN" side does not.

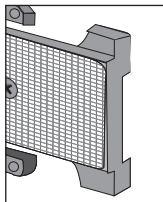


No "bump outs" indicates it is the "IN" side.

Step 5


Push all locking clips together to secure the Frame (3) in their expanded position.

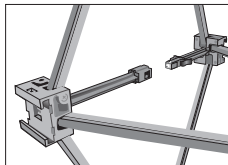

OPEN

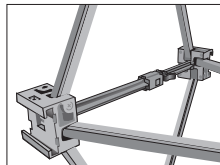


CLOSED

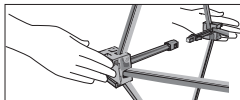

Pressure may need to be applied to secure.



Step 7

Secure the Velcro down the 10' side (same side as the top corner just secured in Step 6). Do not secure bottom corner.

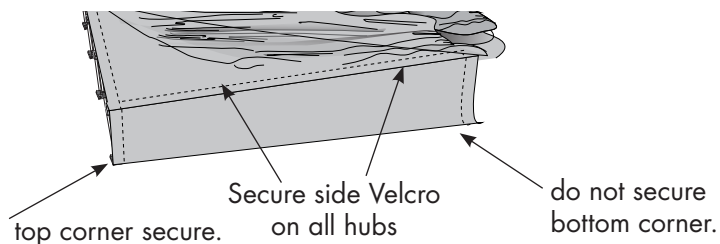


Step 4

Expand both Frames (3) one Frame at a time and place side by side on the floor.

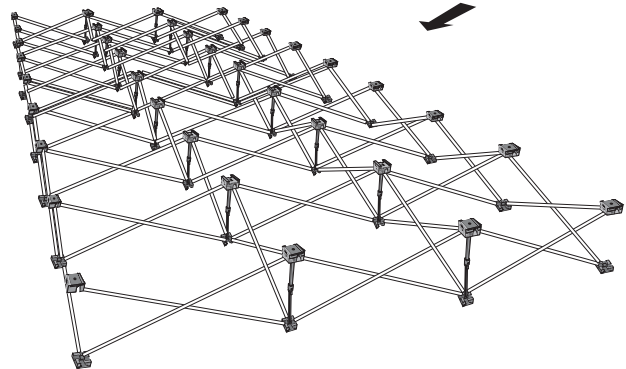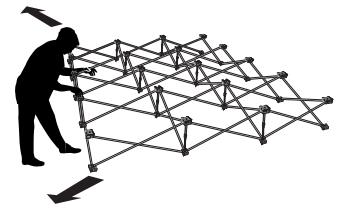


Step 6

Verify that both Frames (3) are facing the same direction by having the light clips run along the 20' top. With top of Frames (3) identified, orient the Fabric Graphic Banner (4) so that its top aligns with the top of the Frames. Secure Velcro at top corner (front and backside)

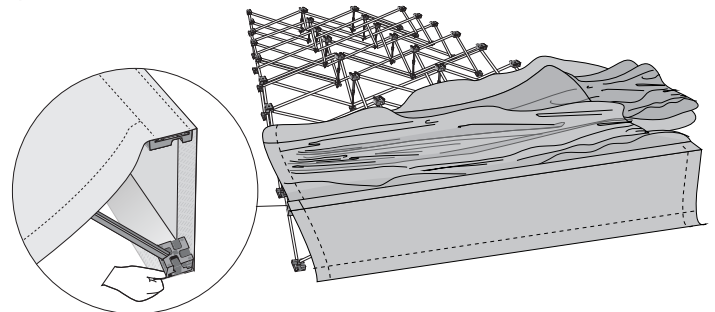

Step 8


Secure the top of the Fabric Graphic Banner (4) and stop at the first Frame (3). Then secure the bottom of the Fabric Graphic Banner (4) all the way to the end (do not secure the bottom corner)

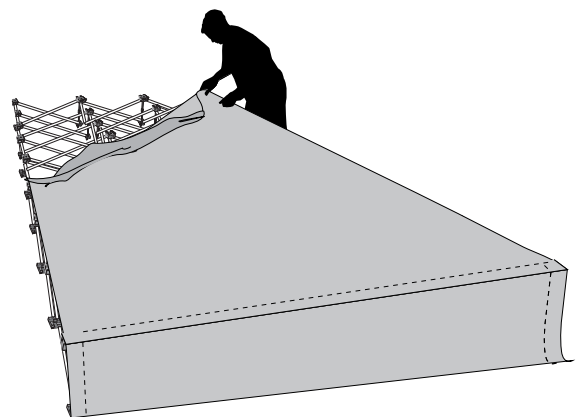

Display Set-Up Continued...


Step 9

Secure the remaining top of the Fabric Graphic Banner (4) and secure the Velcro at top corner (front and backside).

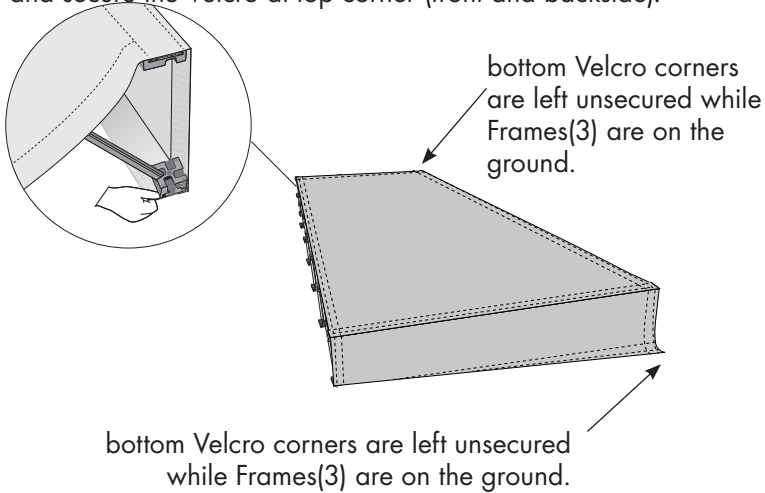


Step 11

Secure Velcro down 10'sides on back of Frames and at bottom corners.

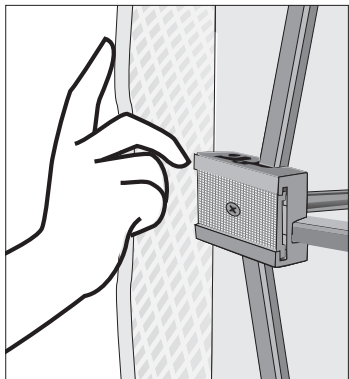


Detail view of Velcro attachment

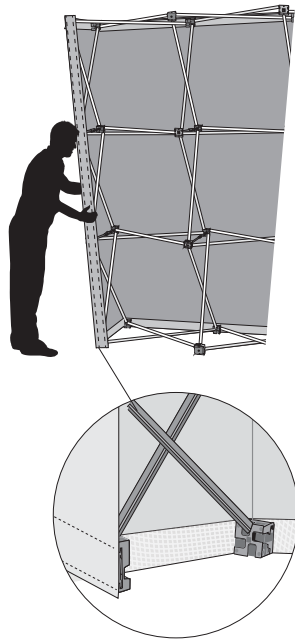


Step 10

With 2 people lifting in unison, stand both Frames (3) up.

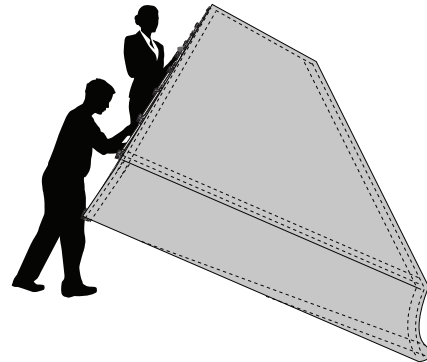


Step 12

Display is now ready for viewing.

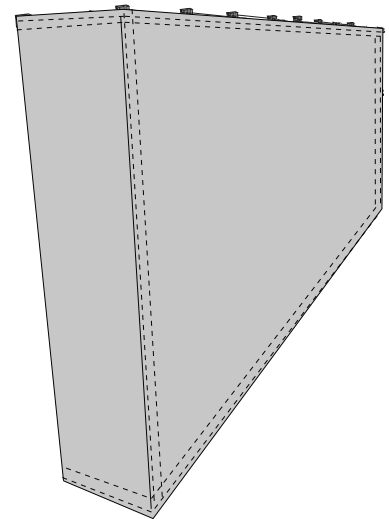

Disassembly note:

Repeat steps 11 thru 1 to disassemble. **MAKE SURE ALL LOCKING CLIPS ARE IN OPEN POSITION** before collapsing Frame (1)

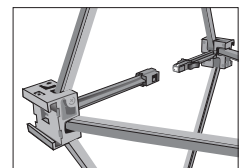

OPEN

Storage

Place all product parts into Carry Cases and store in a cool dry location.



Care

Machine wash Cold gentle cycle. Air dry Only. Wrinkles can be steamed out. Do NOT Dry Clean. Do NOT Iron.

Not Recommended to collapse Frame (3) with Fabric Graphic (4) attached. Graphic will wrinkle.