



# Rectangle Sail Sign Universal Assembly Instruction Sheet

## Product Parts

- 1 - Finished Graphic with Pole Pocket
- 2 - Poles (as shown)
- 3 - 190712 Elastic Cord Kit includes:
  - A-Elastic Cord
  - B-Ring
  - C-Clip

## Optional Parts

- 4- Base (options a/b/c)
  - a. Spike
  - b. Scissor
  - c. Indoor 3-leg
- 5 - Water Ballast (round/square)

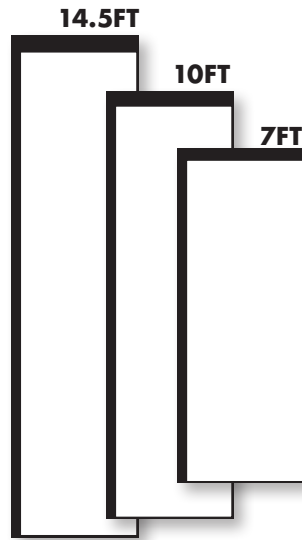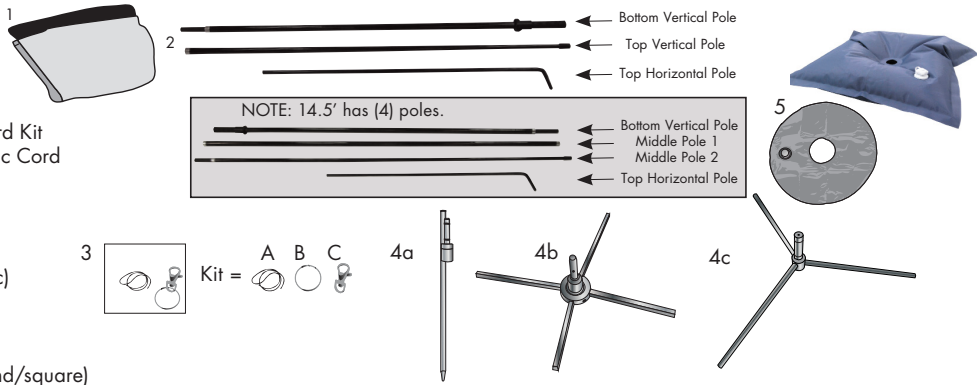

**NOTE: Keep product clear from trees, poles, buildings, or any other obstruction as it will cause premature wear.**


## Display Set-Up

### Step 1

Begin by removing the parts from the carry case and placing them on a clean flat surface.


7' & 10' - Assemble the Vertical Poles (1) by inserting the Bottom Vertical Pole (1) into Top Vertical Pole (1).

14.5' (insert the bottom vertical pole to Middle Pole-1, insert Middle Pole-1 into Middle Pole-2. Insert Middle Pole-2 into Top Vertical Pole).

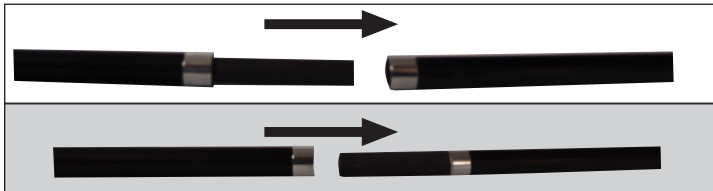

### Step 2

Insert the tip of the Top Vertical Pole (1) into the black pole pocket of your banner. Push the Pole (1) until the tip is viewable through the opening at the top end of the pole pocket.

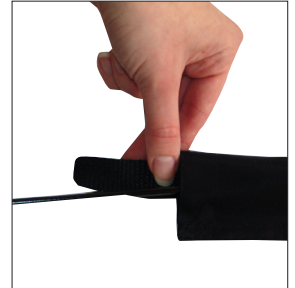

### Step 3

Insert the Top Horizontal Pole (1) into the top pole pocket of your banner. With the angled end in your hand, push the pole until it hits the end of the pole pocket.



### Step 4

Locate the Top Vertical Pole (1) in the pole pocket and carefully connect it with the Top Horizontal Pole's (1) angled end.



### Step 5


Remove the Ring (B) from the Clip (C) on the Elastic Cord Kit (3). Connect the Ring (B) to the webbing loop on the bottom end of your banner's Pole Pockets (1).



## Display Set-Up Continued...


### Step 6

Put one end of the Elastic Cord (A) through the Clip's (C) ring. Attach Clip (C) to the Ring (B)

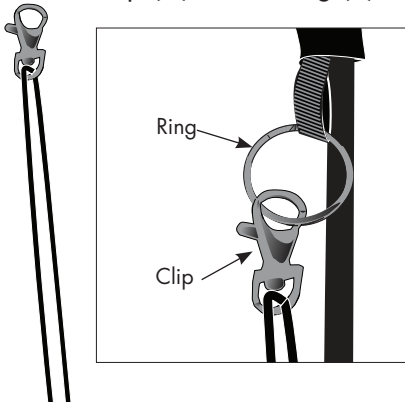


### Step 7

Using the Elastic Cord (A) pull down the Fabric Graphic on the pole. Knot the end of elastic Cord (A) and secure under the plastic Pole Hook located on the base of the Bottom Pole (2)

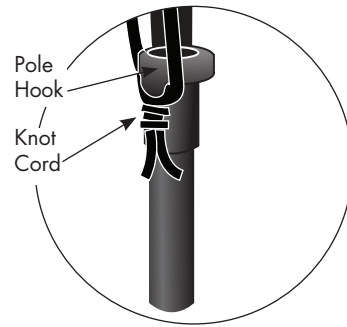


### Optional Base Spike 4a

Hammer Spike Base (4a) into the ground at desired location. **DO NOT** hammer the shorter post. Insert Bottom of Pole (2) over stem on Spike Base (4a).

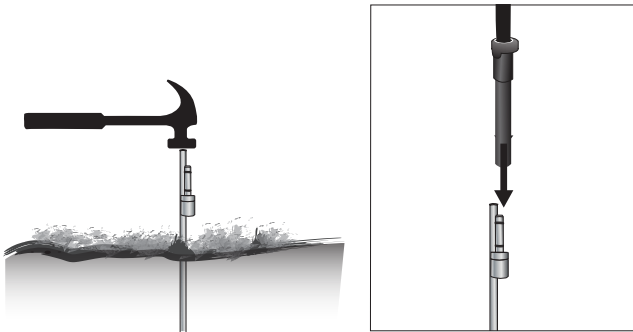


### Optional Base Scissors 4b

Place Scissors Base (4b) at desired location by extending the legs outward. Insert the bottom of the Sail Sign over the Scissor Base (4b) stem.

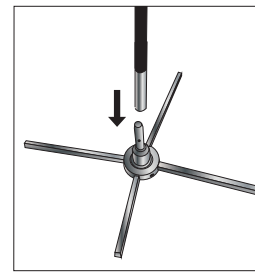

### Optional Base Indoor 3-leg 4c

Set up the 3 Leg Base (4) by screwing in each leg to the center stem. Insert the bottom of the Sail Sign over the 3 Leg Base (4c) stem. This base fits only 6FT/7FT sails.

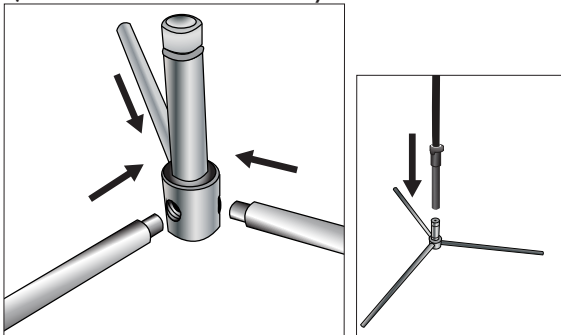

### Optional Water Ballast

Place the Water Ballast (5) over the Base (4) **BEFORE** attaching the Sail Sign. Fill Water Ballast (5) with water for stability.

**NOTE:** 14.5' sail signs will need square water ballasts.



## Storage and Care

Place all product parts into Carry Case and store in a cool dry location, away from direct sunlight. To clean, wipe with damp cloth. Do not iron or dry clean the banner.



*Warranty Information: All products are designed to provide the user with a cost-effective and durable product. Standard warranty is a 'one year parts and labor' warranty which warrants product against defects in material and workmanship. It does not cover damage due to accidents, abuse, or normal wear and tear. Products found to be defective will be replaced or repaired at factory's discretion.*