### ZEPPY SINGLE SIDED OUTDOOR BANNER STAND

OUTDOOR BANNERS
PRODUCT CODE: ZPY1





### PRODUCT DESCRIPTION

The Zeppy Outdoor Banner Stand is the outdoor banner display solution. Stability is maintained with a molded plastic base that can be filled with water for extra weight. The Zeppy is adjustable and can display banners ranging in sizes from 24" W x 63"H to 31.5" W x 71" H. Custom UV printed banners are produced on 13oz scrim vinyl, with a 1" double stitched hem top and bottom to reinforce the #2 grommets in each corner. Available in single sided or double sided banner display. The double sided option displays 2 single sided banners back to back.

OUTDOO

ADJUSTABLE

DISPLAY DIMENSIONS	Varies depending on graphic size	
GRAPHIC SIZE RANGE	24"W x 63"H to 31.5"W x 71"H	
STANDARD GRAPHIC SIZES AVAILABLE	24"W x 63"H	28"W x 67"H
	24"W x 71"H	29"W x 68"H
	25"W x 69"H	30"W x 69"H
	26"W x 68"H	31.5"W × 63"H
	27"W x 67"H	31.5"W x 71"H

#### GRAPHIC MATERIAL

13oz Scrim Vinyl (INV-VIN-SCRIM)

#### **GRAPHIC FINISHING**

1" Double hem with white thread on top and bottom with brass #2 grommets in all 4 corners

#### **DISPLAY CONSTRUCTION**

Aluminum frame with plastic components and molded plastic water fillable base

#### SHIPPING WEIGHTS & DIMENSIONS


Shipping Weight	7 lbs (Graphic Package) 6 lbs (Hardware Only) 1 lbs (Graphic Only)	
Shipping Dimensions	36"L x 4"W x 4"H (GP/Graphics & Pole) 20"L x 15"W x 9.5"H (GP/Base) 30.75"L x 3.5"W x 2.5"H (HO/Poles) 20"L x 15"W x 9.5"H (HO/Base) 24" or 36" L x 4"W x 4"H (Graphic Only)	

#### GRAPHIC TURN AROUND TIME

2 business days after proof approval for up to 10



OUTDOOR BANNERS PRODUCT CODE: ZPY1

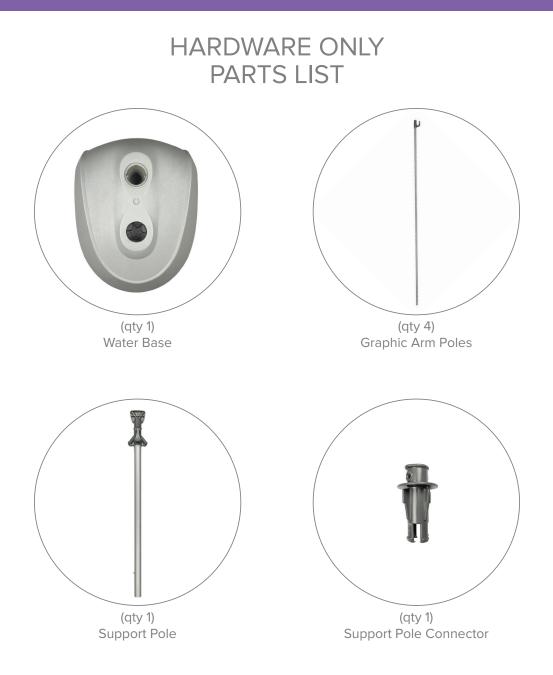

OUTDOOR USE


1 YEAF

ADJUSTABLE

OUTDOOR BANNERS
PRODUCT CODE: ZPY1




## TEMPLATE

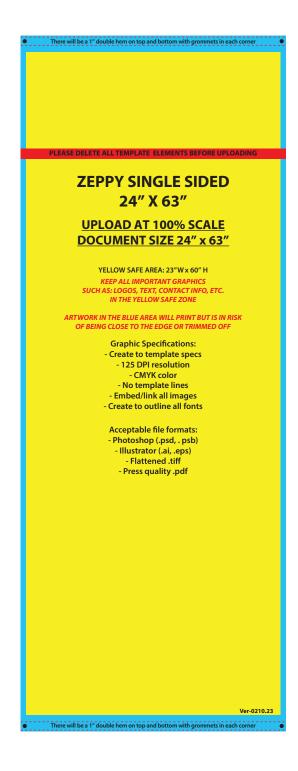

 Red dotted lines represent the sew lines on the finished banner. Banner is hemmed with white thread only. The black dots represent where the grommets will be placed in each corner.

OUTDOOR BANNERS PRODUCT CODE: ZPY1

# SET UP INSTRUCTIONS

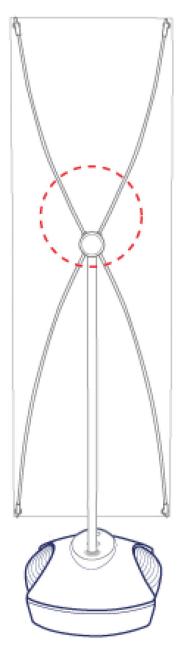

\* Fill base with water to add stability during outdoor use.




SINGLE

Insert support pole connector and support pole into hole on base

OUTDOOF USE

ADJUSTABLE

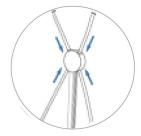

Insert top and bottom graphic arm poles into holes on support pole



Attach eyelets of banner to hooks on ends of graphic arm poles



Hoist banner up to place adequate tension on the banner and press lever down to lock it into place