



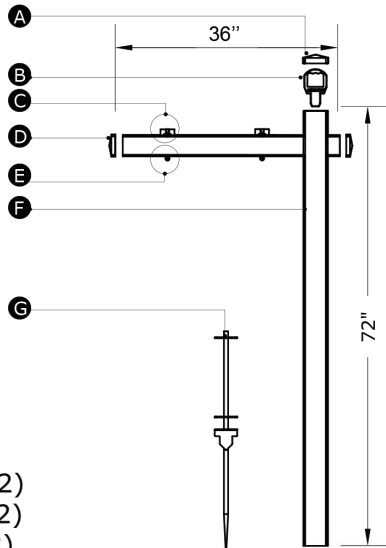

## SET UP INSTRUCTIONS

### Tool Required




### Part List

- A. Post Cap (1)
- B. Rail Key (1)
- C. Rider Clip Kit (2)
- D. Rail End Cap (2)
- E. Sign Clip Kit (2)
- F. Post (1)
- G. Anchor (1)


### Installation Steps

#### Step 1

Use a hammer to drive the Steel Anchor into ground. Make sure that anchor is straight while hammering. The anchor should be driven downwards until the bottom plate is flush with the ground. The bottom plate should be facing forward in the desired direction of real estate post arm.

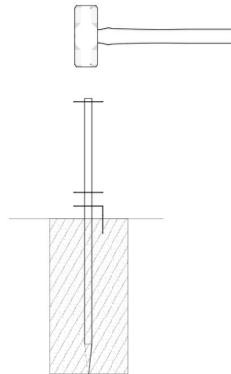

Step 1

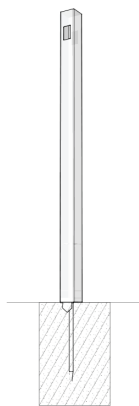

Step 2


#### Step 3

Slide the vinyl real estate post over the anchor until it touches the ground. The hole on the post should be at the top and facing in the desired direction of the sign arm.

Step 3


#### Step 3

Use a screwdriver and attached screws to fix the rider clips on top of the post arm. Then insert the sign clip screw through the arm, and fix the screw.

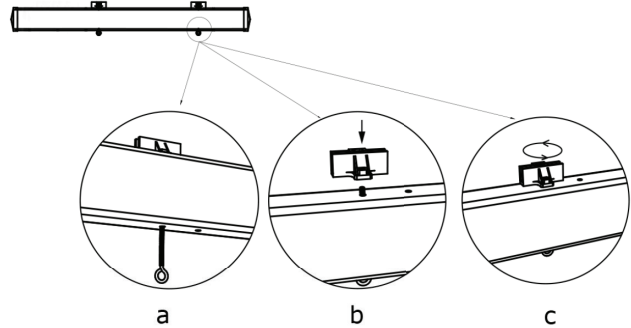


#### Step 4

Slide the vinyl rail into the post. Make sure that the rider clips are facing up. Slide the arm through the holes until the slots are aligned on the inside of the post.

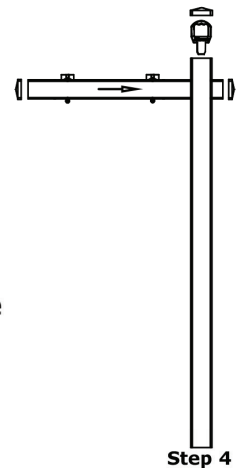

Step 4

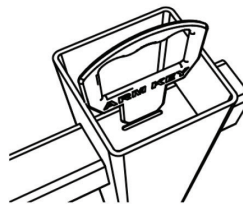


Step 5

#### Step 5

Slide the key into the slots of the real estate post arm until it locks in place. This will secure the arm.

#### Step 6

Slide the post cap onto the top of the real estate post. And slide the rail cap onto both side of the arm.

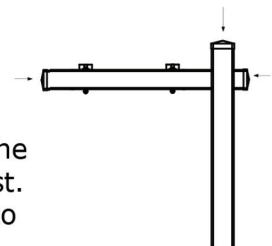

Step 6